

# MODEL CODES

EDITION III



**Linde Hydraulics Corporation**

5089 West Western Reserve Road

Canfield, Ohio 44406

Telephone: (330) 533-6801

Fax: (330) 533-2091

# Model Codes for H-Series-02 Closed Loop Pumps

MODEL	1 DISPLACEMENT (cc/rev)	2 ROTATION	3 CONTROL	4 CONTROL OPTIONS	5 MOUNTING	6 SHAFT	7 R/V SETTING	8 DISP. MAX.	9 DISP. MIN.	10 ADD-ONS	11 SPECIALS
<b>HPV</b>	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/>
<b>EXAMPLE:</b>	<b>105</b>	<b>R</b>	<b>K</b>	<b>1</b>	<b>C</b>	<b>H</b>	<b>420</b>	<b>X</b>	<b>X</b>	<b>AX</b>	<b>X</b>

  

**1 DISPLACEMENT**

75 (4.63 cir)  
105 (6.41 cir)  
135 (8.27 cir)

**2 ROTATION**

R = CLOCKWISE  
L = COUNTER-CLOCKWISE

**3 CONTROL**

H = HYDRAULIC REMOTE  
E = PROPORTIONAL ELECTRIC  
K = MANUAL CAM LEVER

**4 CONTROL OPTIONS**

HPV 'K'    1 = KORIF 1.0  
              2 = KORIF 0.7  
              3 = KORIF 0.8  
              4 = KORIF 1.2  
              5 = KORIF 1.5

E CONTROL 1 = 12 VDC  
              2 = 24 VDC

**5 MOUNTING**

C = SAE C 2 BOLT MTG (75, 105)  
D = SAE D 2 BOLT MTG (135)

**6 SHAFT**

H = ANSI 21T 16/32 P (75)  
          23T 16/32 P (105)  
          27T 16/32 P (135)

C = SAE C 14T 12/24 P  
          (OPT 75, 105)

D = SAE D 13T 8/16 P (OPT 135)

**11 SPECIALS**

INSERT S, THEN CALL OUT REQUIREMENT IN CLEAR TEXT.

**10 ADD-ONS**

PTO'S:

A = SAE A w/9T SPLINE COUPLING (std. on all Models)

B = SAE B w/13T SPLINE COUPLING (2)

J = SAE B w/15T SPLINE COUPLING (2)

C = SAE C w/14T SPLINE COUPLING (2)

ADDITIONAL CONTROLS OPTIONS:

P = PRESSURE OVERRIDE  
X = NONE  
Z = ZERO FLOW DEVICE (1)

**9 MIN. DISPLACEMENT (SINGLE UNITS ONLY)**

ENTER "X", FOR ZERO MIN. DISPLACEMENT. OTHERWISE, SPECIFY SETTING IN CC/REV.

**8 MAX. DISPLACEMENT (SINGLE UNITS ONLY)**

IF NOT DESTROKED, ENTER "X". OTHERWISE, SPCIFY SETTING IN CC/REV.

**7 RELIEF SETTING**

IN BAR

**NOTES:** (1) Only available with "E" Control Option.  
(2) PTO Option removal of Integral Boost Pump and necessities provision for external supply.